

Index

A

ATM
adaptation layer, 57
cell, 57
description, 1
interface types, 3
signaling, 57
atmarp entries, 54

B

BBG commands, 5
BBG configuration
 BBG/ATM configuration, 21
 build entries in bbg.config file, 18
 files updated, 12, 22
 general network configuration, 17
 installation tool, 12
 manual configuration, 22
 update bbg.pvc file, 20
 update hosts file, 14
 update interfaces file, 15
BBG hardware requirements, 4
BBG interface, verify and test, 28
BBG software requirements, 4
Booting the system, 53
Building BBG software, 11

C

Classic IP, 57
Commands
 initif, 56
 install, 12, 32
Configuration
 files updated, 12, 22, 32, 43
 for BBG interface, 11
 for VME interface, 31
 installation tool, BBG, 12
 installation tool, VME, 31

Configure up TCP/IP, 56

F

Files
 atm.pvc, 37, 46
 atmv.cof, 31
 bbg.config, 18, 23
 bbg.pvc, 20, 24
 hosts, 14, 24, 39, 48
 interfaces, 15, 26, 40, 48
 IOS configuration, 31
 param, 34, 35, 44
 to be updated, 12, 22, 32, 43

H

Hardware requirements
 BBG, 4
 VME, 6

I

import utility, 12, 32
Incident reporting, 10
Installation
 BBG hardware, 11
 BBG interface, 10
 completing, 50
 general information, 9
 HIPPI channel, 10
 UNICOS software, 10
 VME hardware, 50
 VME interface, 29
Installation tool
 to configure BBG, 12
 to configure VME, 31
Installer qualifications, 9
Introduction, 1
IP encapsulation, 57