

Contents

	<i>Page</i>
Preface	vii
Related publications	vii
Ordering Cray Research publications	vii
Conventions	viii
Reader comments	ix
Introduction [1]	1
Checklist	1
Organization	3
Features [2]	5
Hardware Support [3]	9
Mainframes	9
Hardware requirements	9
Unsupported hardware	9
Software Support [4]	11
Operating system requirements	11
IOS levels	12
Unsupported software	12
Limitations [5]	13
Hardware and software limitations	13
Online diagnostics	14
Installation and Configuration [6]	15
SG-2156 10.0	iii

Installation	15
Configuration	15
Guest feature configuration	15
File system considerations	16
IOS parameter files	18
MLS considerations	18
Configuration links	19
Getting Started [7]	23
Preparing your host for a guest	23
General considerations	23
Guest file systems	24
IOS parameter files	24
UNICOS (host) parameter files	25
Guest parameter files	28
Booting the host system	29
Configuring the UNICOS under UNICOS feature	29
Validating a user	32
Device validation	33
guest.rc file	35
Checking your configuration	38
Booting a guest to single-user mode	38
Startup	39
Console connections	39
Start-up output example	39
Status	41
Dumping	42
Ending a session	42

	<i>Page</i>
Multiuser Mode Guests [8]	45
Considerations	45
Examples of configuration links	46
Moving to multiuser mode	50
Appendix A Monitoring and Analysis	51
Status	51
CPU monitoring considerations	51
Dumping	53
Appendix B Troubleshooting	59
<code>guest</code> command fails	59
<code>cannot open root device</code> message	59
NQS does not start on the guest	59
Guest does not recognize tape mounts	59
Kernel decompression loops forever	60
Appendix C <code>guest</code> Messages	61
Index	63
 Figures	
Figure 1. UNICOS under UNICOS concept	5
Figure 2. File system disk location	17
Figure 3. Example link for a system running as a guest	20
Figure 4. Example link for a system running as a guest	48

